XOSS G+

# GPS POSITIONING

① **Long press the right button to turn on**

② **Short press the left button to start searching for GPS**
(The GPS icon appears and starts to flash)

③ **After startup, stay still for a few minutes to acquire GPS signal**
 When the GPS icon stops flashing with BEEP prompt, it indicates the device is ready.

④ **Long press the right button to save the workout after ending the ride**
(The Bike Computer restores the initial interface.)

Note: When searching for a GPS signal, please remain static and make sure your device is used at open space and barrier-free area, Moreover, the device only supports outdoor recording.

Battery Capacity

>75%	>50%	>25%
>5%	<5%	

Note: When charging, the battery icon in the upper right corner will change from empty to full, And when there are three bars and it doesn't flash, it means charging is completed,

Left Button
Long Press: End recording
Short Press: Start / Pause / Resume

Customizable Function Button

Right Button
Long Press: Power on / Off
Short Press: Switch data display

Connect with XOSS APP

Search XOSS in Google Play/App Store, or scan QR CODE on the right to download XOSS APP.

① Turn on XOSS G+ and make sure the Bluetooth of the phone is on,

XOSS APP   QR CODE

② Open the XOSS APP, select Devices > Bike Computers > G/G+.

After connecting XOSS G+ to XOSS APP: click on settings to change Backlight, Key Tone, Auto Pause, Speed Alert, Tire Circumference, Units , Time Zone, etc.; the workout data will be automatically synced to XOSS APP.

Note: Long press the left button to end recording before connection. The App is designed for Bluetooth 4.0 or later versions.

Manage the workout

① Connect G+ to XOSS APP.
② Click **Storage** > **Workout**.
③ Click **Edit** in the upper right corner to select one or the multiple workouts you want to delete or resync.

Custom Data Layout

① Connect G+ to XOSS APP.
② Click **Data Layout**.
• Firmware version requirement: 1.09 Version or later
• XOSS app version: Android 3.10.2 or later, iOS 3.11.0 or later

Time Zone Setting in XOSS APP

① Connect G+ to XOSS APP.
② Click **Settings** > **User Profile** > **Time Zone**.
• It will sync the device with the phone's time zone.
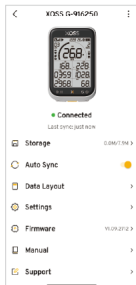
Record 50 Types of Data

①SPEED / AVG SPEED / MAX SPEED / LAP AVG SPEED / LAP MAX SPEED
② HEARTRATE / AVG HR / MAX HR / LAP AVG HR / LAP MAX HR
③ POWER / AVG POWER / 3S AVG POWER / 10S AVG POWER / 30S AVG POWER / MAX POWER / LAP AVG POWER / LAP MAX POWER / W/KG
④ CADENCE / AVG CADENCE / MAX CADENCE / LAP AVG CADENCE / LAP MAX CADENCE
⑤ TIME / PAUSED TIME / TOTAL TIME / LAP TIME / LAP PAUSED TIME / LAP TOTAL TIME
⑥ DISTANCE / LAP DISTANCE / ODOMETER
⑦ ELEVATION / ELEVATION GAIN / GRAD / ELEVATION LOSS / MAX ELEVATION / VAM / LAP ELEVATION GAIN / LAP ELEVATION LOSS / LAP MAX ELEVATION / LAP VAM
⑧ CALORIES / LAP CALORIES / CLOCK / TEMP / LAPS
⑨ HEADLIGHT CONTROL / TAILLIGHT CONTROL

ANT+ Sensor Connection

❶

◄ **3M** ►

Bring the device within 3m of your
sensors, and stay 10m far away from
other rider's sensors.

❷

The icon
is flashing

Press both buttons simultaneously on XOSS G+
until the icon is flashing, which indicates the
XOSS G+ is searching active sensor nearby.

❸

If the pairing succeeds, the icon will remain static,
press the right button again, enter into the
"Tire Circumference" setting interface.

The icon
is static

[Circumference] [Metric/Imperial] [Time Zone]Settings in device

❹

P1

2 140

Tire Circumference Setting(mm)
Press the left button: set numbers
Press the right button: switch position
Long press the right button: next step

❺

P2

Metric/Imperial Unit Setting
Press the left button: switch units
Long press the right button: next step

❻

P3

0000

Time Zone Setting
Press the left button: switch numbers
Press the right button: switch position
Long press the right button: end setting

Customizable Function Button

The middle button of the G3+ cycling computer is a customizable function button. It can be used to start lap counting, control the headlight and taillight switches and toggle between different light modes, etc. More customization options can be set in the XOSS app.

Laps

The G3+ cycling computer supports four types of lap counting: time-based, distance-based, location-based, and manual laps.

Time-Based lap counting: Automatically counts a lap when the set time interval is reached.
Distance-Based lap counting: Automatically counts a lap when the set distance is reached.
Location-Based lap counting: Press the middle button to mark a location. The computer will automatically count a lap each time it reaches the marked location.
Manual lap counting: Press the middle button once completes a lap and starts the next lap.

*All four lap counting modes require successful GPS positioning to start. Long press the left button to end laps.

Firmware Upgrade

When there is new firmware available, the XOSS APP will prompt you to update it. It is best for you to keep the latest firmware.

• If you are stuck at dFu during the firmware upgrade, you could try toggling Bluetooth off and back on again in your phone's settings and reconnect the XOSS APP to upgrade it again.

Packing List

Cycling Computer Mount x 1

Type-C USB Cable x 1

User Manual x 1

XOSS G+ x 1

Protection Rubber Pad x 1

Rubber Band x 2

Installation

① Put the rubber pad on the back of the bike stand;

② Use a rubber band to secure the bracket to the handlebar or stem;

③ Align the tabs on the back of the device with the grooves on the bike stand, press down slightly, and rotate the device 90 degrees until it locks into place.

Cross tie the base with a rubber band

Install the Cycling Computer
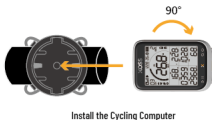
Specification

Name: XOSS G+ Smart GPS Cycling Computer

Size: 55.6mm x 86.2mm x 18.4mm

Product Weight: 58.5g

Operating Temperature: -10℃～50℃

Endurance Time: 40 hours

Battery: 600mAh Rechargeable Lithium Ion

Waterproof: IP67

ANT+ Sensor: Speed Sensor, Heart Rate Monitor, Speed/Cadence Sensor, Power Mater

Data Display: 50 Types of Data

After-sales Service & Warranty

It has a one-year free warranty from the date of purchase, please contact your original dealer for warranty service.

The following conditions are not covered by the warranty:

1. The normal aging loss of the battery;
2. Damage and loss of products due to improper installation;
3. Damage caused by abnormal use, such as high temperature and water damage;
4. Damage caused by dismantling yourself or by unauthorized maintenance personnel.

Support

Please access **https://www.xoss.co** or **help.xoss.co** for more product information.